


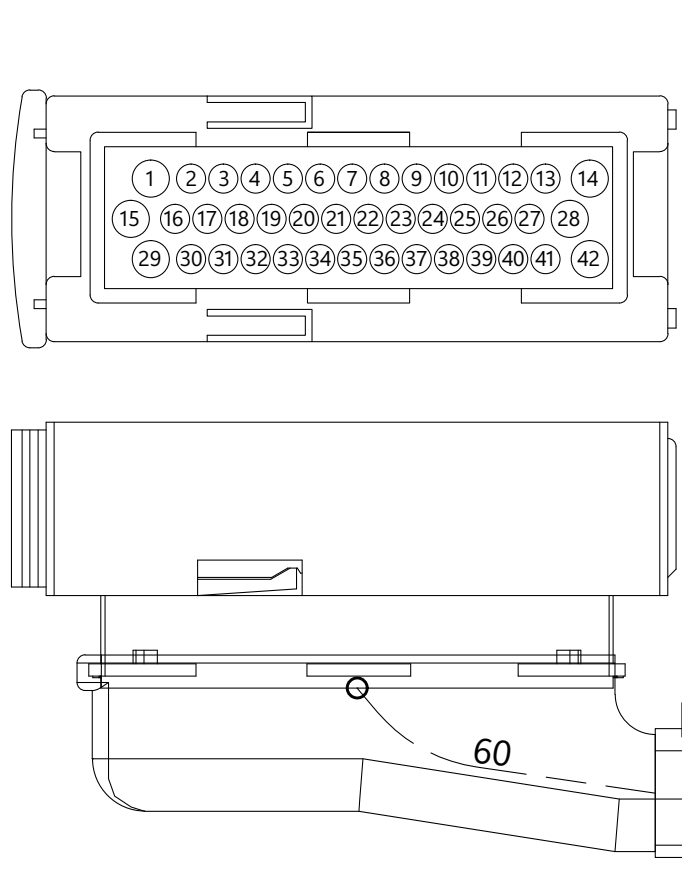

JPT42					
PIN	Colour	Sec.	Cable	Cross	Function
2	BLUE-WHITE	0.5		B/2	OIL PRESSURE
4	BLUE	0.5	CV	BAR/C	TRANS. PRESS SIGNAL
7	WHITE-RED	0.5		A/6	ENGINE RPM (W)
10	BLUE	0.5	CV2	MOT/2	ENGINE -
11	BROWN	0.5	CV2	MOT/1	ENGINE +
12	YELLOW	1		A/2	ELECTROVALVE
13	WHITE	1		B/1	AUX OUT
14	BLACK	2.5		A/1	STARTING (50)
16	GREY-BLACK	1		A/4	EXCITATION
17	BROWN	0.5	CV	BAR/B	15/54 TRANS. PRESS.
20	RED	1	CV1	CAN/1	15/54 CAN BUS
21	GREEN	0.50	CV1	CAN/4	CAN L
23	BLUE	0.5		A/7	HIGH ENGINE TEMP.
24	PURPLE	0.5		B/5	H2O
25	BLACK	0.5		A/10	EMERGENCY
26	GREEN	0.75		A/8	D+
28	RED	2.5		A/3	+BATTERY (30)
29	GREY	1.5		A/11	-BATTERY (31)
30	PURPLE-BLACK	0.5		B/3	ENGINE TEMP.
31	ORANGE-BLACK	0.5		B/4	FUEL LEVEL
34	BLACK	1	CV1	CAN/3	GND CAN BUS
35	YELLOW	0.50	CV1	CAN/2	CAN H
36	WHITE-BLACK	0.5		B/6	CLOGGED FILTER
38	WHITE	0.5		A/9	LOW OIL PRESSURE
39	ORANGE	0.5		A/5	RESERVE

BAR					
PIN	Colour	Sec.	Cable	Cross	Function
B	BROWN	0.5	CV	JPT42/17	15/54 TRANS. PRESS.
C	BLUE	0.5	CV	JPT42/4	TRANS. PRESS. SIGNAL

A

PIN	Colour	Sec.	Cross	Function
1	BLACK	2.5	JPT42/14	STARTING (50)
2	YELLOW	1	JPT42/12	ELECTROVALVE
3	RED	2.5	JPT42/28	+BATTERY (30)
4	GREY-BLACK	1	JPT42/16	EXCITATION
5	ORANGE	0.5	JPT42/39	RESERVE
6	WHITE-RED	0.5	JPT42/7	ENGINE RPM (W)
7	BLUE	0.5	JPT42/23	HIGH ENGINE TEMP.
8	GREEN	0.75	JPT42/26	D+
9	WHITE	0.5	JPT42/38	LOW OIL PRESSURE
10	BLACK	0.5	JPT42/25	EMERGENCY
11	GREY	1.5	JPT42/29	-BATTERY (31)

B				
PIN	Colour	Sec.	Cross	Function
1	WHITE	1	JPT42/13	AUX OUT
2	BLUE-WHITE	0.5	JPT42/2	OIL PRESSURE
3	PURPLE-BLACK	0.5	JPT42/30	ENGINE TEMP.
4	ORANGE-BLACK	0.5	JPT42/31	FUEL LEVEL
5	PURPLE	0.5	JPT42/24	H2O
6	WHITE-BLACK	0.5	JPT42/36	CLOGGED FILTER

MOT					
PIN	Colour	Sec.	Cable	Cross	Function
1	BROWN	0.5	CV2	JPT42/11	ENGINE +
2	BLUE	0.5	CV2	JPT42/10	ENGINE -

CAN					
PIN	Colour	Sec.	Cable	Cross	Function
1	RED	1	CV1	JPT42/20	15/54 CAN BUS
2	YELLOW	0.50	CV1	JPT42/35	CAN H
3	BLACK	1	CV1	JPT42/34	GND CAN BUS
4	GREEN	0.50	CV1	JPT42/21	CAN L