


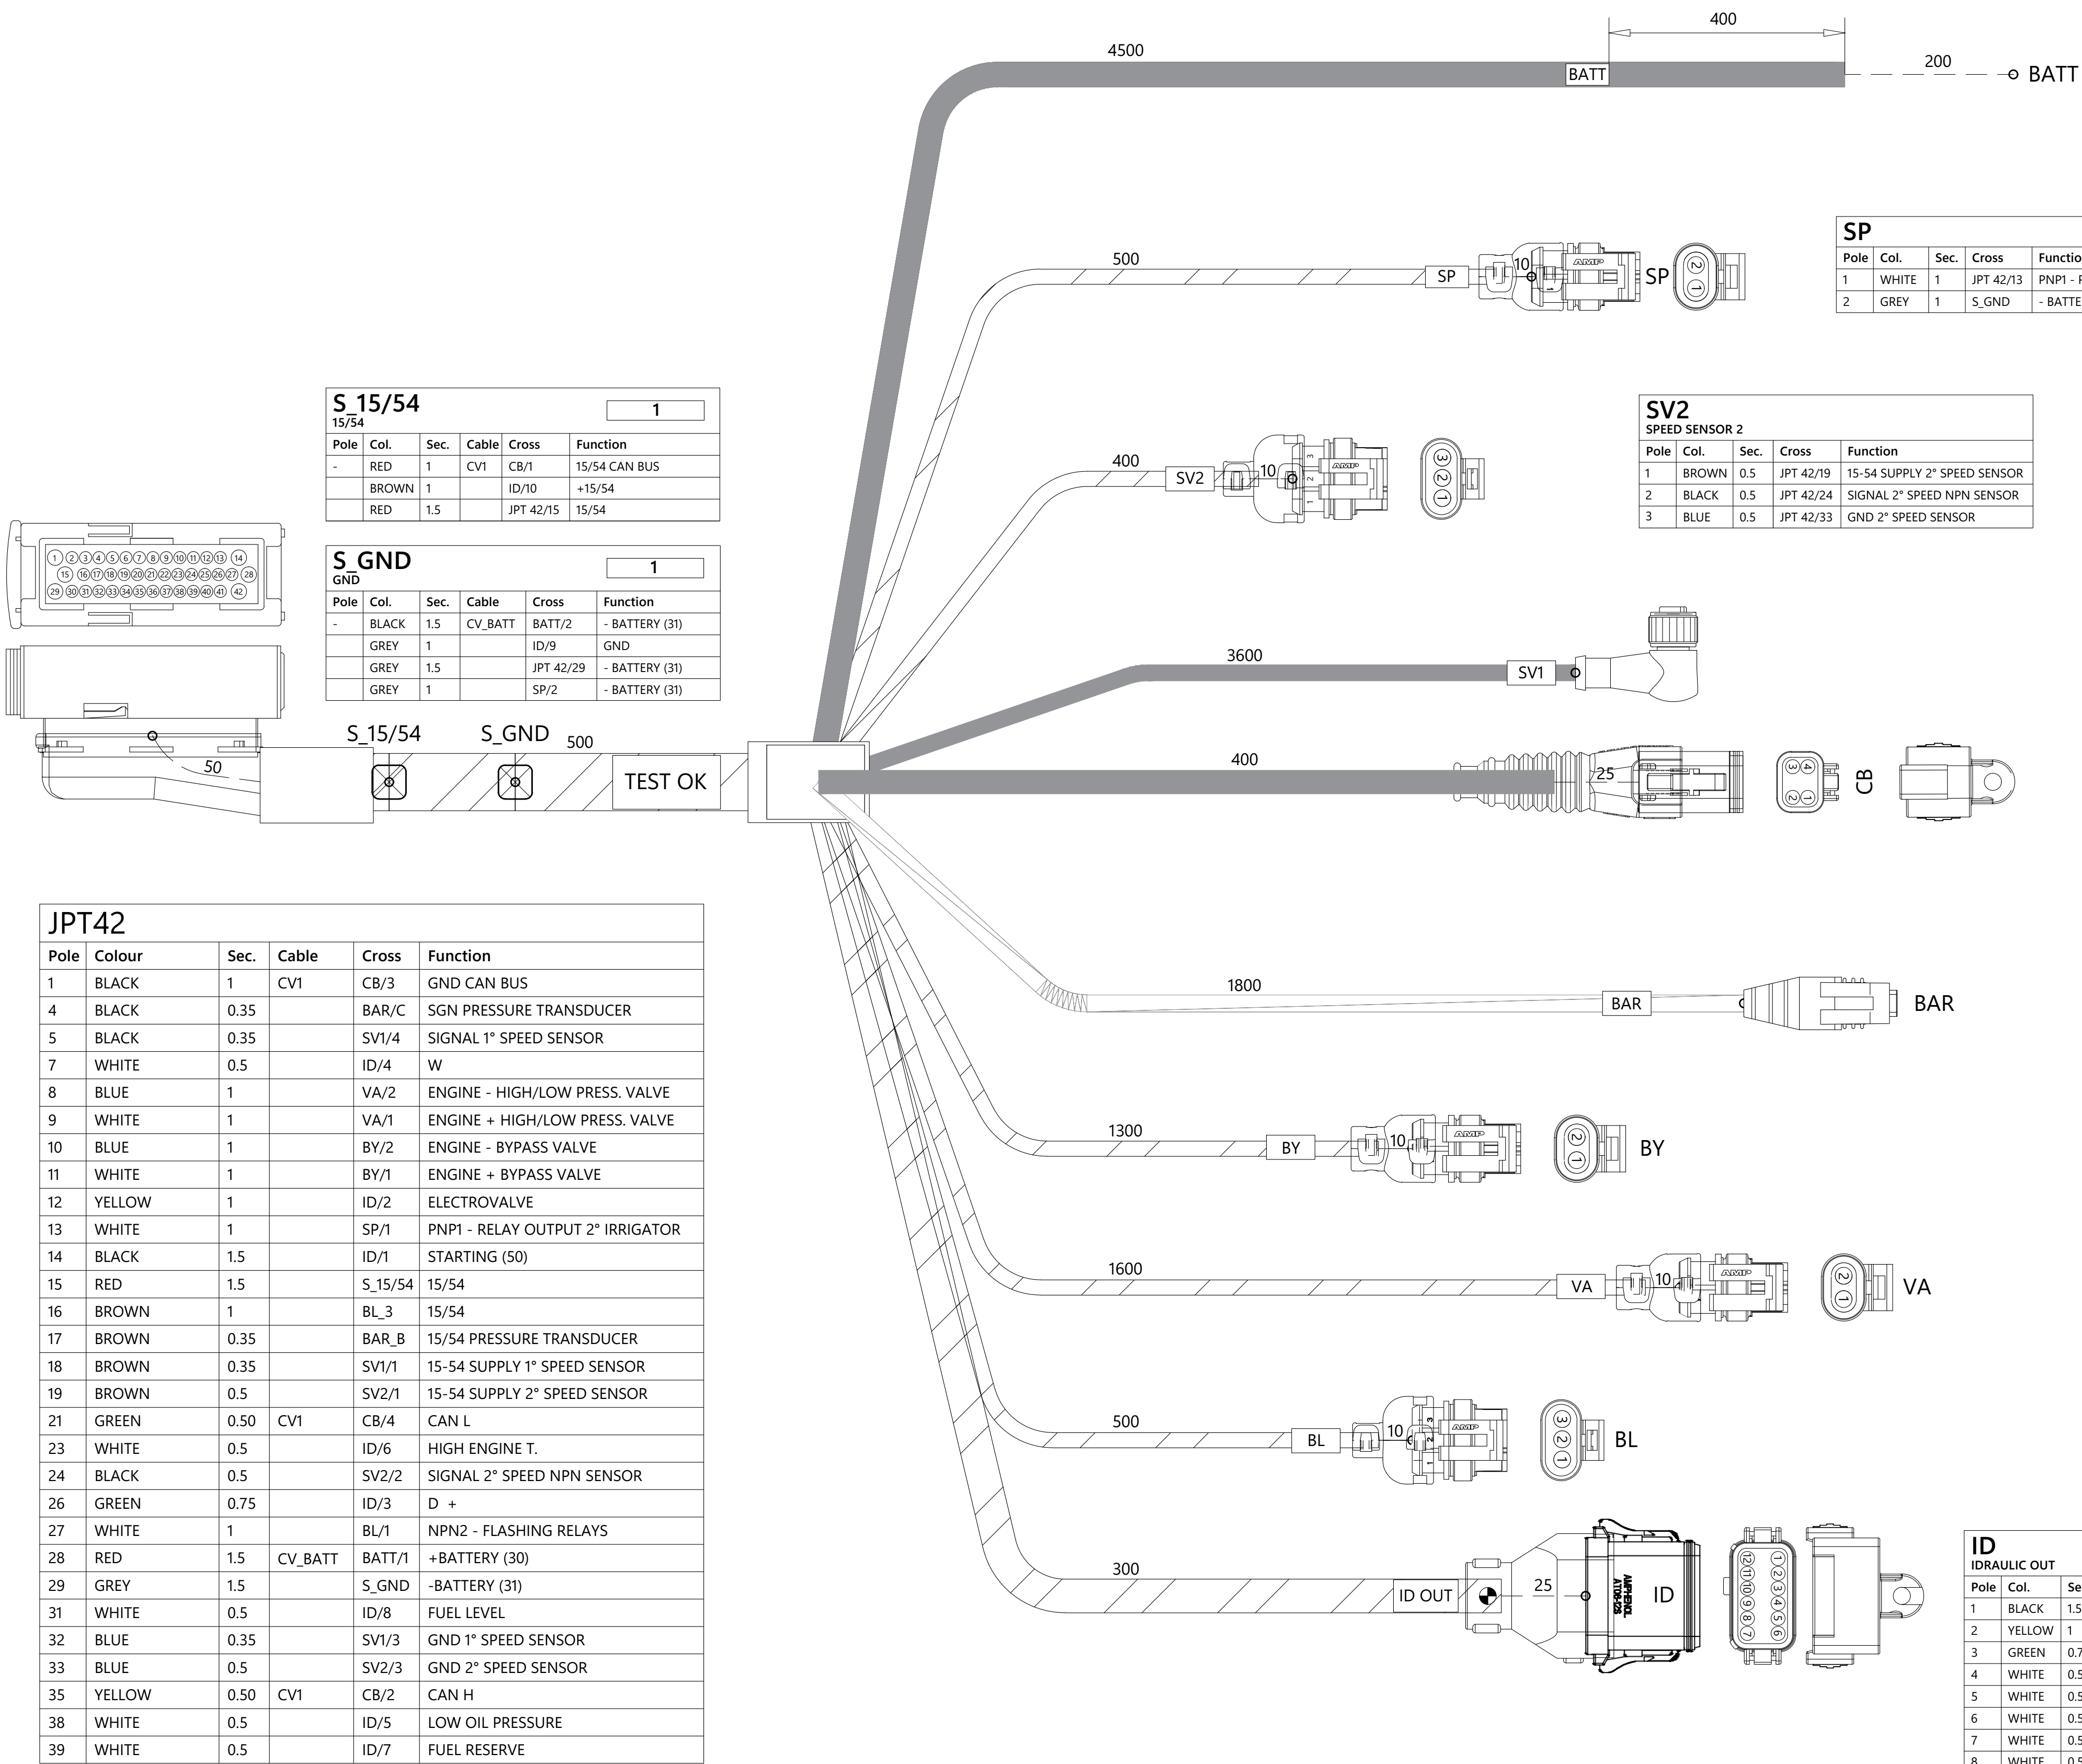

S_15/54					
Pole	Col.	Sec.	Cable	Cross	Function
-	RED	1	CV1	CB/1	15/54 CAN BUS
	BROWN	1		ID/10	+15/54
	RED	1.5		JPT 42/15	15/54

S_GND					
Pole	Col.	Sec.	Cable	Cross	Function
-	BLACK	1.5	CV_BATT	BATT/2	- BATTERY (31)
	GREY	1		ID/9	GND
	GREY	1.5		JPT 42/29	- BATTERY (31)
	GREY	1		SP/2	- BATTERY (31)

BATT					
Pole	Col.	Sec.	Cable	Cross	Function
1	RED	1.5	CV_BATT	JPT 42/28	+ BATTERY (30)
2	BLACK	1.5	CV_BATT	S_GND	- BATTERY (31)

SP				
Pole	Col.	Sec.	Cross	Function
1	WHITE	1	JPT 42/13	PNP1 - RELAY OUTPUT 2° IRRIGATOR
2	GREY	1	S_GND	- BATTERY (31)

SV2				
SPEED SENSOR 2				
Pole	Col.	Sec.	Cross	Function
1	BROWN	0.5	JPT 42/19	15-54 SUPPLY 1° SPEED SENSOR
2	BLACK	0.5	JPT 42/24	SIGNAL 2° SPEED NPN SENSOR
3	BLUE	0.5	JPT 42/33	GND 2° SPEED SENSOR

SV1				
SPEED SENSOR 1				
Pole	Col.	Sec.	Cross	Function
1	BROWN	0.35	JPT 42/18	15-54 SUPPLY 1° SPEED SENSOR
3	BLUE	0.35	JPT 42/32	GND 1° SPEED SENSOR
4	BLACK	0.35	JPT 42/5	SIGNAL 1° SPEED SENSOR

CB					
CAN BUS					
Pole	Col.	Sec.	Cable	Cross	Function
1	RED	1	CV1	S_15/54	15/54 CAN BUS
2	YELLOW	0.50	CV1	JPT 42/35	CAN H
3	BLACK	1	CV1	JPT 42/1	GND CAN BUS
4	GREEN	0.50	CV1	JPT 42/21	CAN L

BAR				
Pole	Col.	Sec.	Cross	Function
B	BROWN	0.35	JPT 42/17	15/54 PRESS. TRANS.
C	BLACK	0.35	JPT 42/4	SGN PRESS. TRANS.

BY				
Pole	Col.	Sec.	Cross	Function
1	WHITE	1	JPT 42/11	ENGINE+ BYPASS VALVE
2	BLUE	1	JPT 42/10	ENGINE- BYPASS VALVE

VA				
Pole	Col.	Sec.	Cross	Function
1	WHITE	1	JPT 42/9	ENGINE+ HIGH/LOW PRESS. VALVE
2	BLUE	1	JPT 42/8	ENGINE- HIGH/LOW PRESS. VALVE

BL				
Pole	Col.	Sec.	Cross	Function
1	WHITE	1	JPT 42/27	NPN2 - FLASHING RELAYS
3	BROWN	1	JPT 42/16	15/54

JPT42					
Pole	Colour	Sec.	Cable	Cross	Function
1	BLACK	1	CV1	CB/3	GND CAN BUS
4	BLACK	0.35		BAR/C	SGN PRESSURE TRANSDUCER
5	BLACK	0.35		SV1/4	SIGNAL 1° SPEED SENSOR
7	WHITE	0.5		ID/4	W
8	BLUE	1		VA/2	ENGINE - HIGH/LOW PRESS. VALVE
9	WHITE	1		VA/1	ENGINE + HIGH/LOW PRESS. VALVE
10	BLUE	1		BY/2	ENGINE - BYPASS VALVE
11	WHITE	1		BY/1	ENGINE + BYPASS VALVE
12	YELLOW	1		ID/2	ELECTROVALVE
13	WHITE	1		SP/1	PNP1 - RELAY OUTPUT 2° IRRIGATOR
14	BLACK	1.5		ID/1	STARTING (50)
15	RED	1.5		S_15/54	15/54
16	BROWN	1		BL_3	15/54
17	BROWN	0.35		BAR_B	15/54 PRESSURE TRANSDUCER
18	BROWN	0.35		SV1/1	15-54 SUPPLY 1° SPEED SENSOR
19	BROWN	0.5		SV2/1	15-54 SUPPLY 2° SPEED SENSOR
21	GREEN	0.50	CV1	CB/4	CAN L
23	WHITE	0.5		ID/6	HIGH ENGINE T.
24	BLACK	0.5		SV2/2	SIGNAL 2° SPEED NPN SENSOR
26	GREEN	0.75		ID/3	D +
27	WHITE	1		BL/1	NPN2 - FLASHING RELAYS
28	RED	1.5	CV_BATT	BATT/1	+BATTERY (30)
29	GREY	1.5		S_GND	-BATTERY (31)
31	WHITE	0.5		ID/8	FUEL LEVEL
32	BLUE	0.35		SV1/3	GND 1° SPEED SENSOR
33	BLUE	0.5		SV2/3	GND 2° SPEED SENSOR
35	YELLOW	0.50	CV1	CB/2	CAN H
38	WHITE	0.5		ID/5	LOW OIL PRESSURE
39	WHITE	0.5		ID/7	FUEL RESERVE

ID				
IDRAULIC OUT				
Pole	Col.	Sec.	Cross	Function
1	BLACK	1.5	JPT 42/14	STARTING (50)
2	YELLOW	1	JPT 42/12	ELECTROVALVE
3	GREEN	0.75	JPT 42/26	D+
4	WHITE	0.5	JPT 42/7	W
5	WHITE	0.5	JPT 42/38	LOW OIL PRESSURE
6	WHITE	0.5	JPT 42/23	HIGH ENGINE T.
7	WHITE	0.5	JPT 42/39	FUEL RESERVE
8	WHITE	0.5	JPT 42/31	FUEL LEVEL
9	GREY	1	S_GND	GND
10	BROWN	1	S_15/54	+15/54